# **FULL HEIGHT TURNSTILES**







The CPST is our most stylish full height turnstile. The CPST's clear arms and side panel provide a less industrial look than a traditional all-metal turnstile. The CPST is a good alternative to expensive, secured revolving doors.

## **COMMON APPLICATIONS**

- Time & Attendance Integration
- Loss Prevention
- Employee and Visitor Access Control
- Unmanned Point of Entry
- Single Direction Traffic Control /
  One-Way Exiting

### **TYPICAL INSTALLATION SITES**

- Corporate Offices
- Government Facilities
- Refineries & Power Distribution Centers
- Correctional Institutions

## **FUNCTION**

CPST turnstiles are designed to control access into and out of facilities. Among its many attributes, the CPST comes with self-adjusting, self-centering, speed control. This highly unique feature ensures a consistently even rotation, and smoothly self-centers the turnstile, under all conditions. The CPST is best suited for indoor or covered outdoor use. Contact Alvarado for recommendations on finishes and specific weatherization options for harsh environments.

# **AVAILABLE CONFIGURATIONS**

#### CPST-6X

Provides separate electric lock controls for both directions. Key lock override controls are included and can provide free passage in both directions; free passage in one direction and restricted passage (locked) in the opposite direction; or restricted passage (locked) in both directions. The CPST-6X interfaces with virtually any access control system.

## **AVAILABLE FINISHES**

#### POWDER COATED

All exterior stainless steel and aluminum materials are powder coated. Powder coating is available in a variety of colors.

#### STAINLESS STEEL / ALUMINUM

Materials fabricated from #304 stainless steel are polished to a #4 satin finish. Materials fabricated from aluminum receive a smooth milled finish.

### MATERIALS

#### **TOP CHANNEL**

The exterior housing is fabricated from 16-gauge #304 stainless steel, regardless of finish. The interior Top Channel frame is a 7" wide U-frame fabricated from 4-gauge powder coated steel. The Top Channel houses the control mechanism and electrical components.

#### YOKE GUARD PLATE (COVER)

A 16-gauge #304 stainless steel sheet securely fastens to the Top Channel & Yoke.

#### YOKE (CURVED SECTION)

The Yoke is a two piece assembly consisting of a .177" (4.5mm) thick, clear panel fabricated from Spartech Polycast® SAR™ secured within an extruded aluminum frame.

#### **ROTO (ROTATING SECTION)**

The Roto is a single assembly consisting of 11 arms per section (total of 33 arms per Roto) welded to a vertical tube. Arms are fabricated from 1" x 3" clear Polycast® acrylic with a super abrasion resistant surface glued and press fit into a stainless steel "boot" which is welded to a vertical 3" OD x 7-gauge #304 stainless steel tube. No external fasteners are used in the construction of the Roto.



12660 Colony Street • Chino, CA 91710 USA +1.909.591.8431 • Toll Free: 800.423.4143

CPST



#### **OV (BARRIER SECTION)**

The OV is a single assembly consisting of 10 arms fabricated from 1" x 3" clear Polycast<sup>®</sup> acrylic with a super abrasion resistant surface, glued and press fit into a steel "boot" which is welded to a vertical 3" OD x 7-gauge #304 stainless steel tube. No external fasteners are used in the construction of the OV.

## **CONTROL, OPERATIONAL MODES & FUNCTIONALITY**

#### CONTROL MECHANISMS

**Turnstile Control Board -** The Turnstile Control Board (TCB) controls activation and turnstile functions. Activation for either direction of operation is achieved by supplying a momentary dry contact to the TCB. Terminal strips on the board provide access to the available I/O. Communication between the turnstile and access control system is in the form of dry contact inputs and outputs. A primary power to low voltage transformer located in the turnstile Top Channel provides appropriate low voltage power to the TCB. The transformer may be bypassed by providing either 10VAC or 13.5VDC directly to the TCB.

**Locking Control -** The locking and unlocking of the turnstile is controlled with hardened steel lock arms that are moved into the appropriate locked or unlocked position by continuous duty rated solenoids and spring assemblies. There is independent control of each rotational direction.

**Opto Interruptor Detection Assembly -** Rotation of the turnstile is detected by an internal opto interruptor assembly. No mechanical microswitches are used.

**Hydraline™ Speed Control & Self-Centering Mechanism -** Turnstiles have Alvarado's speed control system that self-adjusts to the pushing force of the user. This ensures a safe, controlled, turnstile rotation and safely and smoothly returns the rotating turnstile section to the home position.

**Cam Shaft Assembly, Splined Connection -** The cam and shaft assembly consists of a stainless steel, investment cast lobed cam welded to a splined shaft. The splined shaft fits into a reciprocal splined coupling in the top of the Roto, creating a solid non-slip connection that ensures very precise movement and reduces mechanism wear. The design makes it mechanically impossible to improperly install the Roto of the turnstile.

**Enclosed Bearing Assemblies -** The cam and shaft assembly housed in the Top Channel rotates in a bearing assembly consisting of two outdoor rated precision bearings. The upper visible bearing is protected by a sheet metal cover. The Roto is installed on an outdoor rated lower bearing assembly also protected by a sheet metal cover.

**Card Readers -** Alvarado provides two options for installation of mullion sized and larger card readers (see options).

#### PASSAGE MODES - ELECTRIC LOCK CONTROL MODELS

Electrically controlled turnstiles offer the following user configurable passage modes:

**Controlled Passage -** The Roto is locked in place in the home position. Upon receipt of an authorization signal from an access control system, the turnstile unlocks in the appropriate direction, allowing a single passage in the authorized direction. The Roto returns to the closed position after the user has passed through the turnstile or the user defined time frame allowed for an entry to occur expires. Controlled passage can be either single direction or bidirectional.



**Free Passage -** An authorization signal is not required for a user to pass through the turnstile. Either rotation direction can be set to free passage using the key locks located on the underside of the Top Channel.

**Optional (RKO-3)** - A remote 3-position key switch allows the turnstile to be placed in controlled passage mode, free passage mode, or always locked mode (see Options).

#### PASSAGE MODES - MANUAL (NO ELECTRIC LOCK CONTROL)

Manual turnstiles offer the following user configurable passage modes:

**Free Passage / No Passage -** Each rotation direction can be either locked or free passage through the use of the key locks located on the underside of the turnstile Top Channel.

#### FUNCTIONALITY - OTHER FEATURES AND TOOLS

**Operational Configuration -** The standard configuration is fail-lock (CCW) / fail-safe (CW). Other configurations are available including fail-lock in both directions or fail-safe in both directions.

**Field Configuration Changes -** Our turnstile design makes it very easy to change configurations in the field. Competitor turnstiles require removing and returning the entire Top Channel to the factory for configuration changes.

Adjustable Timed Delay Auto Re-Lock - This feature adjusts the time a user is allowed to pass through the turnstile after activation, before the turnstiles automatically relocks. The turnstile ships with a default setting of 20 seconds. There are four separate settings less than 20 seconds, or the timed delay auto relock feature may be disabled.

**Independent Turnstile Testing -** The Turnstile Control Board includes test activation buttons, which allow the unlocking function to be tested independent of the access control system. This is an excellent tool for troubleshooting.

**Junction Box -** The transformer assembly in the turnstile Top Channel includes a junction box with AC plugs to power devices used during installation or to supply power access devices.

# CARD READERS / PHYSICAL ACCESS DEVICES

There are two options for card reader / physical access device attachment (see options). For either option, feeder wires are provided to simplify the process of running cable through the turnstile Yoke up into the turnstile Top Channel.



12660 Colony Street • Chino, CA 91710 USA +1.909.591.8431 • Toll Free: 800.423.4143

4



# TURNSTILE INTERFACE TO ACCESS CONTROL SYSTEM

There are two types of interfaces to allow an access control system to operate with the turnstile:

#### DRY CONTACT

Single passage activation is achieved by supplying an isolated, voltage free, momentary dry contact (between .5 and 2 seconds in duration) to the appropriate location on the Turnstile Control Board. Various outputs are also available to provide information on operational status and activity. A description of available input and output signals is provided below.

#### SERIAL

Alvarado offers an optional serial interface device that converts an RS-232 computer output to a momentary dry contact. Contact Alvarado for information (see Options).

A description of the available input and output signals from the Turnstile Control Board is provided below:

Input Signal	Entry / Exit
Direction Closed	$\checkmark$
Good Card	$\checkmark$
Bad Card	$\checkmark$
Free Passage	$\checkmark$
No Passage	

Output Signal	Entry / Exit
Rotational Signal	$\checkmark$
(dry contact)	

# **OPTIONS**

#### **EXPEDITED MANUFACTURING TIMES**

Expedited manufacturing times are available. Contact customer service for current availability.

#### CARD READER ATTACHMENT

These are two options for card reader attachment. Alvarado can pre-drill a pattern for installation of a mullion sized reader. Alternatively, we can provide a 6" x 6" attachment plate which allows the attachment of the majority of the card readers used. With either option, feeder wires are provided to simplify the process of running cable through the turnstile Yoke up into the turnstile Top Channel.

#### USER NOTIFICATION ACTIVATION LIGHTS (JS-2 LIGHTS)

Available for use with 6X models, an LED array in a weatherized housing is located on the turnstile yoke slightly above and behind the card reader plated receiver area. The JS-2 option allows the user to select one of two signal arrays: red/ green or red / green / yellow. The user selection is made via a jumper on the turnstile control board.

The light arrays function in the following manner:

#### **RED / GREEN SELECTION\***

**Red Light -** An illuminated red light indicates the turnstile is locked and ready for card presentation.

**Green Light -** An illuminated green light indicates the access system has provided the TCB with an activation indicating an "authorized" card has been presented. When the green light illuminates, the turnstile will unlock.





#### **RED / GREEN / YELLOW SELECTION\***

**Red Light -** An illuminated red light indicates the access system has provided the TCB with an activation indicating that an "unauthorized" card has been presented. The turnstile will remain locked.

**Green Light -** An illuminated green light indicates the access system has provided the TCB with an activation indicating an "authorized" card has been presented. When the green light illuminates, the turnstile will unlock.

**Yellow Light -** An illuminated yellow light indicates the turnstile is locked and ready for card presentation.

#### **OPEN / CLOSED STATUS LIGHTS**

Red and green LEDs are available to indicate whether the turnstile is open or closed. LEDs are installed in the Top Channel for easy visibility. This option is used in conjunction with remote unlocking (see electrical functionality).

#### FAIL-SAFE / FAIL-SAFE OPERATION

Both sides of the turnstile will unlock upon loss of power and provide free passage in both directions. The CLST-6X unit is supplied in a fail-lock (entry) / fail-safe (exit) mode as default.

#### FAIL-LOCK / FAIL-LOCK OPERATION

Both sides of the turnstile will remain locked upon loss of power. Key overrides (which are standard) can still be used to unlock the turnstile. The CLST-6X unit is supplied in a fail-lock (entry) / fail-safe (exit) mode as default.

#### OUT OF SERVICE LOCK BRACKET

Enables the turnstile to be secured with a padlock when the turnstile is out of service.

#### PADDED HEEL / ARM PROTECTIVE SLEEVES

Padded sleeves for arms at pushing level or for lower roto arms. Heel / Arm guards are packaged three to a set.

#### ELECTRIC LOCK CONTROL UPGRADE (MODEL CLST-3 UNITS ONLY)

All Model CLST-3 units are convertible to electric lock control. CLST-3 Top Channel frames include brackets and insertion holes to allow for easy field retrofit by a qualified technician.

#### 220VAC

A 220VAC, 50 - 60 Hz transformer is substituted for the standard 110VAC transformer. 220VAC units bear CE marking, except for battery backup capability which is not available on CE marked units.

#### **RKO-3 (REMOTE TURNSTILE MODE KEYSWITCH)**

A loose three-position key switch is provided that allows the turnstile to be placed in one of three operational modes. A key switch is required for each direction of operation.

**Controlled Passage -** The Roto is locked in place in the home position. Upon receipt of an authorization signal from an access control system, the turnstile unlocks in the appropriate direction, allowing a single passage in the authorized direction. The Roto returns to the closed position after the user has passed through the turnstile or the user defined time frame allowed for an entry to occur expires. Controlled passage can be either single direction or bi-directional.

\*Photos depicting light options may be found at www.alvaradomfg.com



**Free Passage -** An authorization signal is not required for a user to pass through the turnstile. Either rotation direction can be set to free passage using the key locks located on the underside of the Top Channel.

**No Passage (Direction Closed) -** No Passage is allowed. The Roto is locked in place. Valid electronic credentials are ignored and passage is not allowed.

#### PUSH BUTTON ASSEMBLY

Unlocks the turnstile for one passage with a stainless steel push button assembly.

#### **BATTERY BACKUP**

A trickle charge battery system is installed in the Top Channel to provide limited duration operation if primary power to the turnstile is lost. Not available on CE marked units.

#### TOP CHANNEL STABILIZER

A Top Channel stabilizer can be provided to increase rigidity between the OV and the Top Channel.

#### **READER PLATE RECEIVER COVER**

A small aluminum plate used to cover an unused reader plate receiver.

#### INTERFACE COMMUNICATION OPTIONS

Contact Alvarado for more information.

#### LOCK ARM MONITOR

Provides an output when either lock arms is engaged. Monitors required for each direction of operation.

#### **CHANNEL COVER MONITOR**

Provides an output when the Top Channel cover is removed.

#### **DUST PROTECTION**

Additional protection measures are added to the Top Channel for extremely dusty installation environments. Contact Alvarado for more information.





## **SHIPPING & SITE PREPARATION**


#### SHIPPING

CPST turnstiles are shipped in five main sections: the Top Channel, the Yoke, the Roto, the OV and the Yoke Guard Plate. Each section is fabricated as a sub-assembly for easy installation.

#### SITE PREPARATION

All turnstiles must be installed on a firm foundation in a manner that allows the required power and activation signal cabling to be pulled into the top channel. Optional conduit may be run through the OV base. The recommended slab platform is 72" square by 4" deep, level concrete. Concrete anchors, bolts and washers are included with each turnstile. Installation should be performed by a skilled installer following Alvarado's directions and instructions. Detailed drawings and installation manuals are available online.

### **TECHNICAL DIMENSIONS**

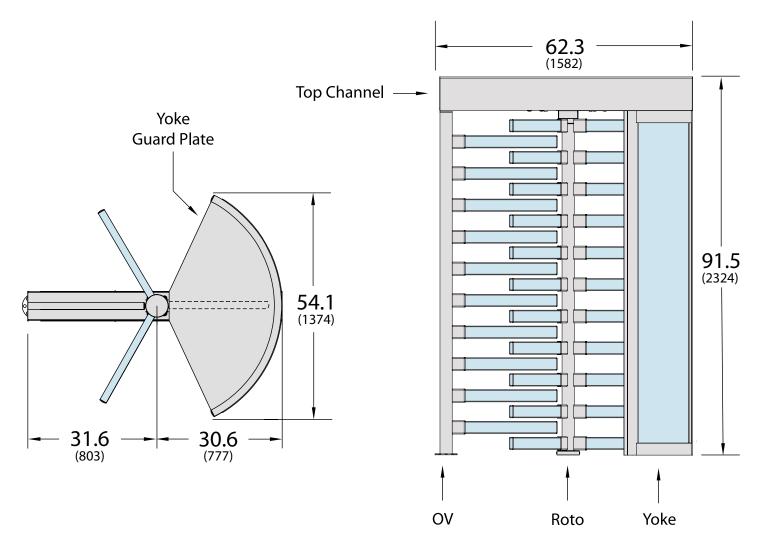

Dimensions shown in inches (mm). All measurements are approximate.



ELECTRICAL				
	DESCRIPTION			
TRANSFORMER	110VAC, 50-60 Hz which steps power down to 12VDC for product operation. The transformer may be bypassed by supplying a 10VAC or 13.5VDC directly to the Turnstile Controller (TCB).			
POWER REQUIREMENTS	Max power consumption is 65W per turnstile with all available electrical options.			
OPERATIONAL VOLTAGE	Primary power is stepped down and rectified for low voltage 12VDC / 5VDC operation.			
ON/OFF SWITCH	An on/off switch is located on each power junction box inside the Top Channel. A visible green LED is illuminated on the TCB when power is "on."			
POWER RECEPTACLES	The power junction box inside the Top Channel includes two 110VAC power receptacles providing a convenient way for installers or technicians to power tools or equipment used during installation and maintenance of the turnstile.			
SURGE PROTECTION	Each TCB provides transient voltage suppression up to 80 amps for low voltage AC inputs. Control signal lines are protected up to 600W per input. This combination provides superior lightning and surge protection.			
BI-DIRECTIONAL SOLENOID DRIVERS	Each TCB provides one solenoid driver per rotation direction.			
WEIGHT, DIMENSIONS, ENVIRONMENT				
	STANDARD	METRIC		
PRODUCT WEIGHT	520 lbs.	236 kg		
SHIPPING WEIGHT*	720 lbs.	327 kg *Includes weight of shipping crate(s)		
HEIGHT	91.5"	2324 mm		
WIDTH	62.3"	1582 mm		
DEPTH	54.1"	1374 mm		
OPERATING TEMP. RANGE	-20° to 150° F	-29 to 66° C		
STORAGE TEMP. RANGE	-30° to 160° F	-34 to 71° C		
RELATIVE HUMIDITY	0-90% (non condensing)			

# WARRANTY

For a period of one year from the date of shipping, Alvarado will replace or repair, at Alvarado's option, any products or parts which are defective in materials or workmanship, provided recommended installation and maintenance procedures are followed. This warranty is void if damage is due to improper installation, maintenance or use. This warranty is limited to parts only, and does not cover labor or shipping charges incurred in connection with the removal or replacement of warranted products or parts.

This warranty is expressly made in lieu of any and all other warranties, expressed or implied, including, but not limited to implied warranties of merchantability and fitness for a particular purpose. Alvarado shall not be liable for any loss or damage, directly or indirectly, arising from the use of purchased products. In no event shall Alvarado be liable to buyer for consequential damages, special damages, incidental damages, loss of use, business interruption, loss of profits, or damages of any kind arising out of the use or inability to use a purchased product. In NO event shall Alvarado be liable for damages which exceed the purchase price of a covered product.



ALVARADOMFG.COM information@alvaradomfg.com 12660 Colony Street • Chino, CA 91710 USA +1.909.591.8431 • Toll Free: 800.423.4143

CPSI